Assembly Instructions


▲ Important ▲

Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

www.spectrumfurniture.com 800-235-1262, 715-723-6750

Thank you for purchasing Spectrum products!

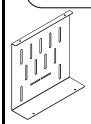

(1) 060047 Sling side



(2) 026547 1/4-20 x 1-1/2" **PHMS**



(1) 060048 Sling base



(2) 021605 #10 x 1-3/4" PHSM



(2) 0103894 54" Strap / buckle assembly

(1) 0100193

(3) 0103619

1/2" x 1/16" thick


2" x 2" x 1" shim




(1) 042025 1/4-20 x 3/8" THMS



(2) 026057

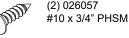

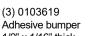

(2) 026017 1/4-20 x 1/2" PHMS




(1) 0166363 Leg bracket




(2) 034195 1/4-20 Wing nut

Assemble and adjust CPU sling

- 1. Assemble the sling side and base using (2) 1/4-20 wing nuts as shown in Figure 1.1.
- Thread the straps through the slots in sling side and base as shown in Figure 1.2 with the tails hanging down. (The center slot can be used for smaller CPU's.)
- 3. Thread each strap through the buckles as shown.

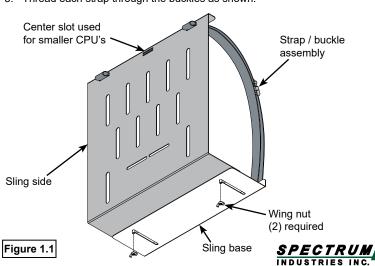

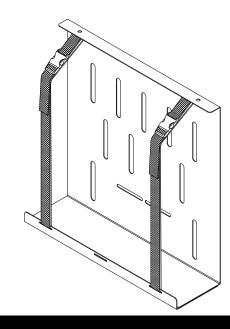

Adjustable CPU Sling 95513



(1) 044890 1" Nylon spacer







threaded inserts)



(1) 042139 Drill template

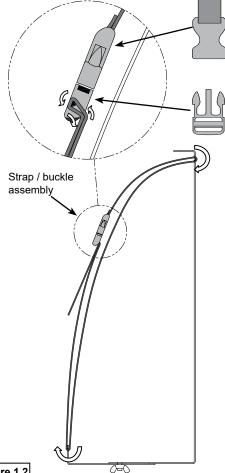



Figure 1.2

0100192R6 Page 1 of 4

2 Attach sling to desk

With threaded inserts:


- 1. Determine whether the CPU sling will mount on the right or left side of the desk and align the top sling holes with the appropriate set of inserts. **Figure 2.1, 2.2** shows a sling being mounted on the left side of a desk.
- 2. Attach the sling to the worksurface using two 1/4-20 PHM screws and tighten.

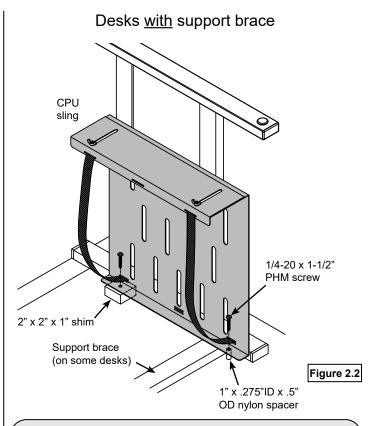


Note: For desks with support brace **Figure 2.2**, use one nylon spacer (044890) in the front hole, and one 2" x 2" x 1" shim (010093) in the back hole with the longer 1/4-20 x 1-1/2" PHM screws (026547.) The front of the sling will extend past the support brace.

Without threaded inserts:

- 1. Determine whether the CPU sling will mount on the right or left side of the desk.
- Fold and tape the enclosed drill template (042139) to the underside of the worksurface in the position shown in Figure 2.3.
- 3. Wrap a piece of tape around a 1/8" drill bit to mark 3/4" from the end of the bit. Figure 2.4.
- 4. Drill through the template on the two marked holes closest to the leg, 3/4" deep. Figure 2.3.
- 5. Attach CPU sling to worksurface using (2) #10 sheet metal screws.

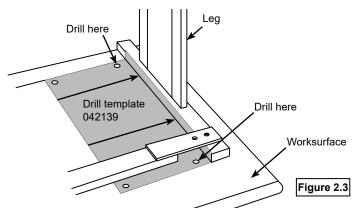

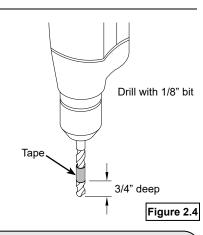

Note: Desks without inserts or support brace use two #10 x 3/4" PHSM Screws (026057.) Desks without inserts that include a support brace as in **Figure 2.3**, use one nylon spacer (044890) in the front hole, and one 2" x 2" x 1" shim (010093) in the rear hole using the longer #10 x 1-3/4" PHSM screws (021605.) The front of the CPU sling will extend past the support brace (See **Figure 2.2** for reference.)



3 Attach leg bracket

Note: If the CPU sling is being used on an Evolution™ desk, <u>one</u> of the included leg brackets should be secured to the sling. This bracket hooks onto the desk leg to provide additional support for the sling.

- Determine which type of leg you have (welded or adjustable) and apply the adhesive bumpers accordingly. Figure 3.1-3.2.
- 2. Line up the bracket with the front slot of the CPU sling as shown and install (1) 1/4-20 x 3/8" THM screw (042025). **Figure 3.3**.
- Adjust the leg bracket until it is snug against the leg, then tighten 1/4-20 x 3/8" THM screw to secure.

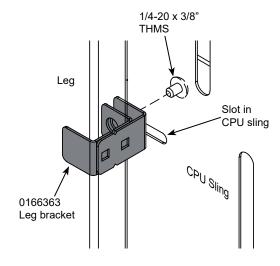
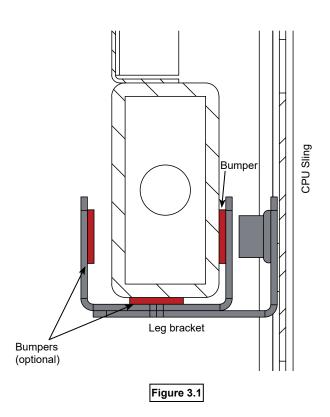


Figure 3.3

Note: The adhesive on the bumpers is designed to work with powder coated metal and has a strong bond. It is not easy to remove and reposition without damaging the bumper. Be sure each bumper is centered on the bracket in the locations shown before applying to the metal.

Bumper Installation - Welded leg

Bumper Installation - Adjustable (one-piece) leg



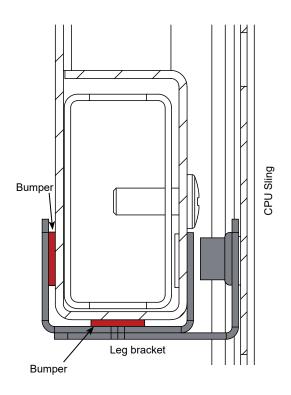


Figure 3.2



Install CPU and adjust straps

- 1. Slide the base to the widest position and carefully place the CPU unit into the sling.
- 2. Slide the base tight against the CPU and tighten the two wing nuts underneath.
- 3. Make sure the CPU will be fully-supported by both straps. Tighten the straps around the CPU while keeping the buckles positioned as high as possible to avoid interference.

Figure 4.1. The center slot can be used with smaller CPU's. Figure 4.2.

