

# Assembly Instructions

## ⚠ Important ⚠


Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included.

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

[www.spectrumfurniture.com](http://www.spectrumfurniture.com)  
800-235-1262, 715-723-6750

*Thank you for purchasing Spectrum products!*

*Note: The Undermount AV Channel is not compatible with an installed 95036 Undermount Rack Cabinet.*

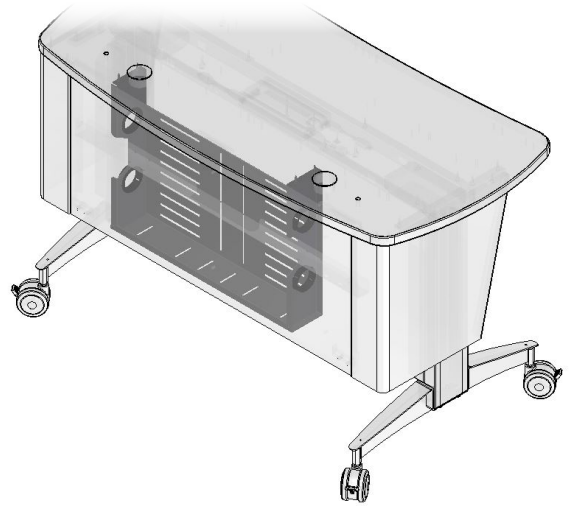

## Undermount AV Channel

95039 - 36"W Pivot Premier

95038 - 48"W Pivot Premier


95037 - 60"W Pivot Premier

(2) 0169161  
End panel




Assembly tip: Do not tighten component fasteners completely until all have been installed. Keeping them loose will help with alignment between parts during assembly.


(1) of the following center panels will be included

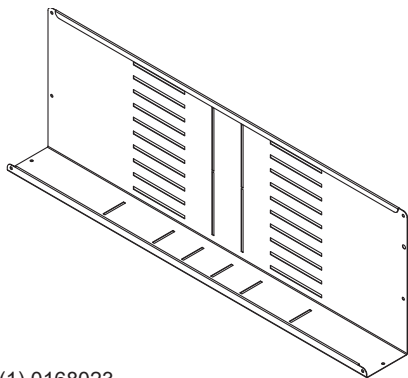


(1) 0168023  
Center panel for  
60" Pivot Premier

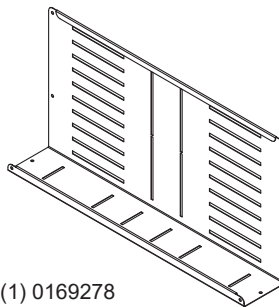

(1) 0169278  
Center panel for  
48" Pivot Premier

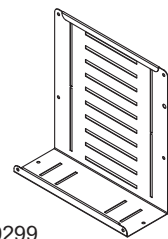

(1) 0169299  
Center panel for  
36" Pivot Premier

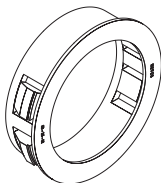

(4) 059984  
2" Grommet

### Parts Bag




(8) 0190174  
#8 x 3/8" PHSM




(4) 0101382  
#14 x 7/8" PHSM

Note: Assembly steps shown are the same for all three AV channel sizes


## 1 Attach end panels to center panel

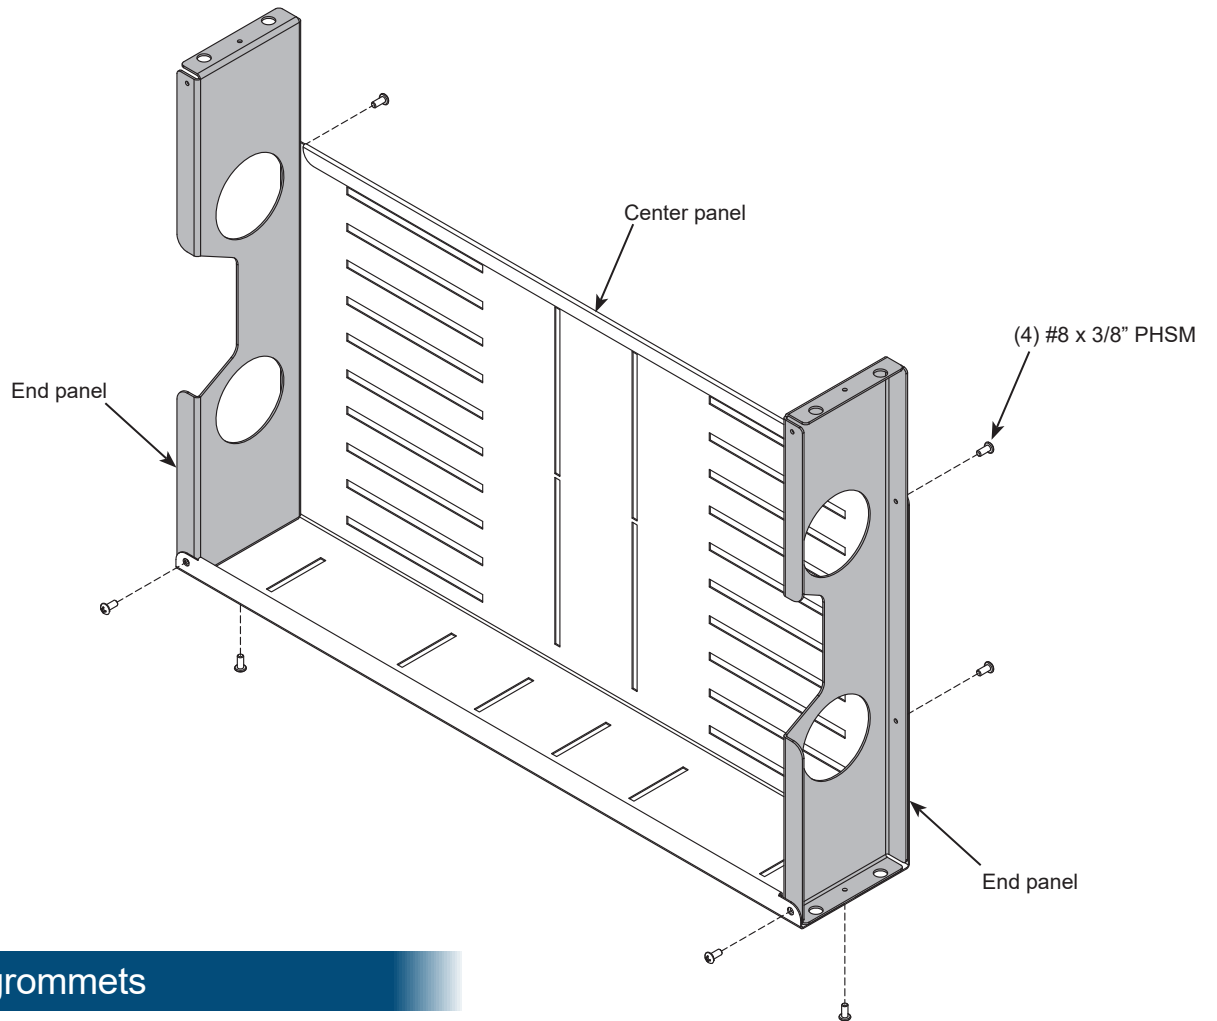

## 2 Install 2" grommets

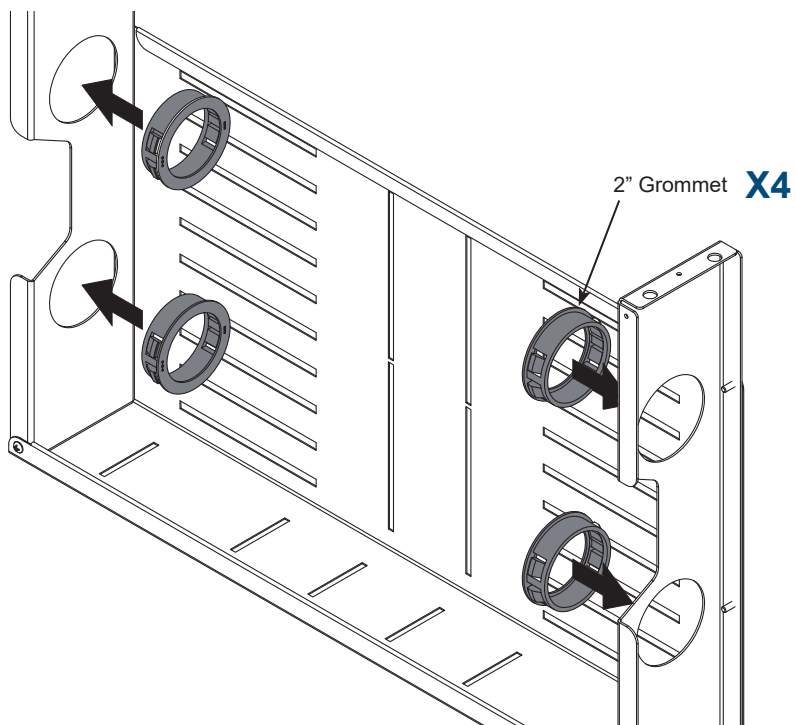


### 3 Remove modesty panel from Pivot Premier

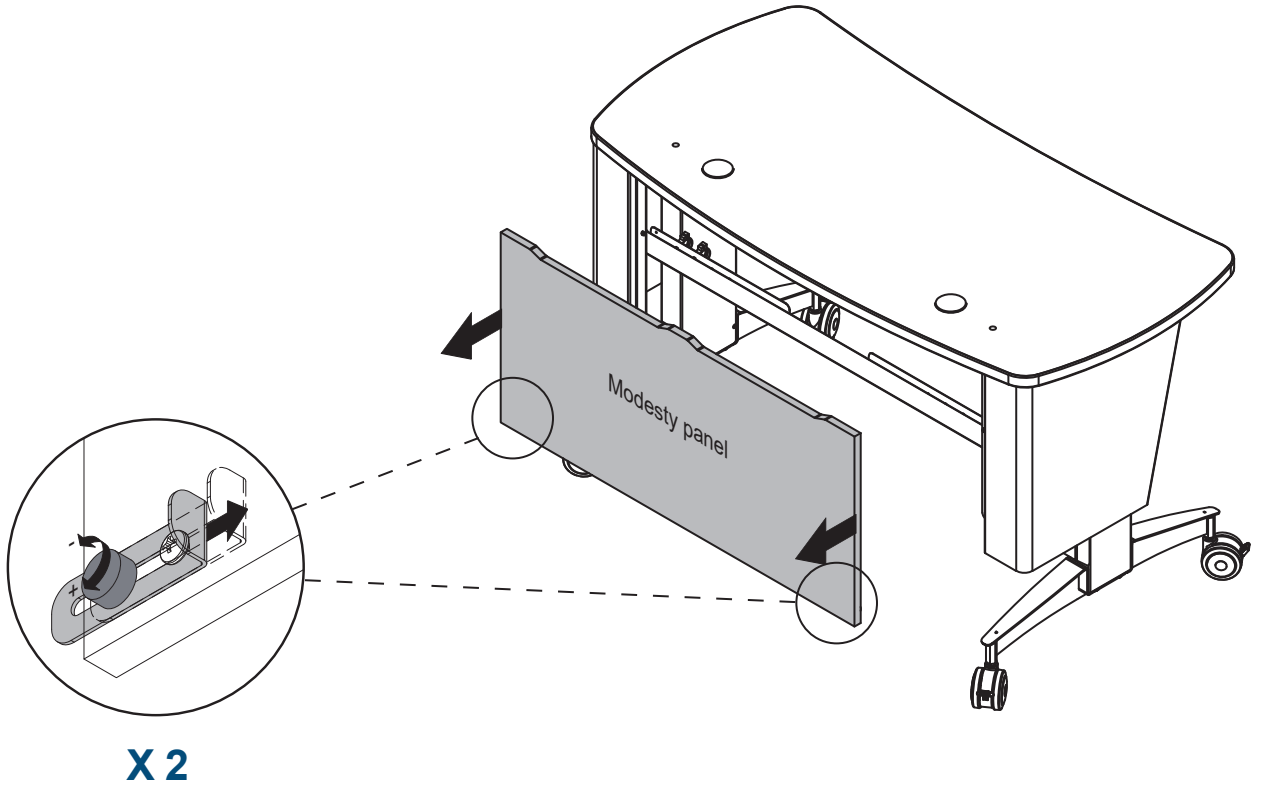

### 4 Attach AV channel to worksurface




Assembly tip: There are two sets of pilot holes available for the AV channel under the Pivot Premier worksurface. (Left and right positions).

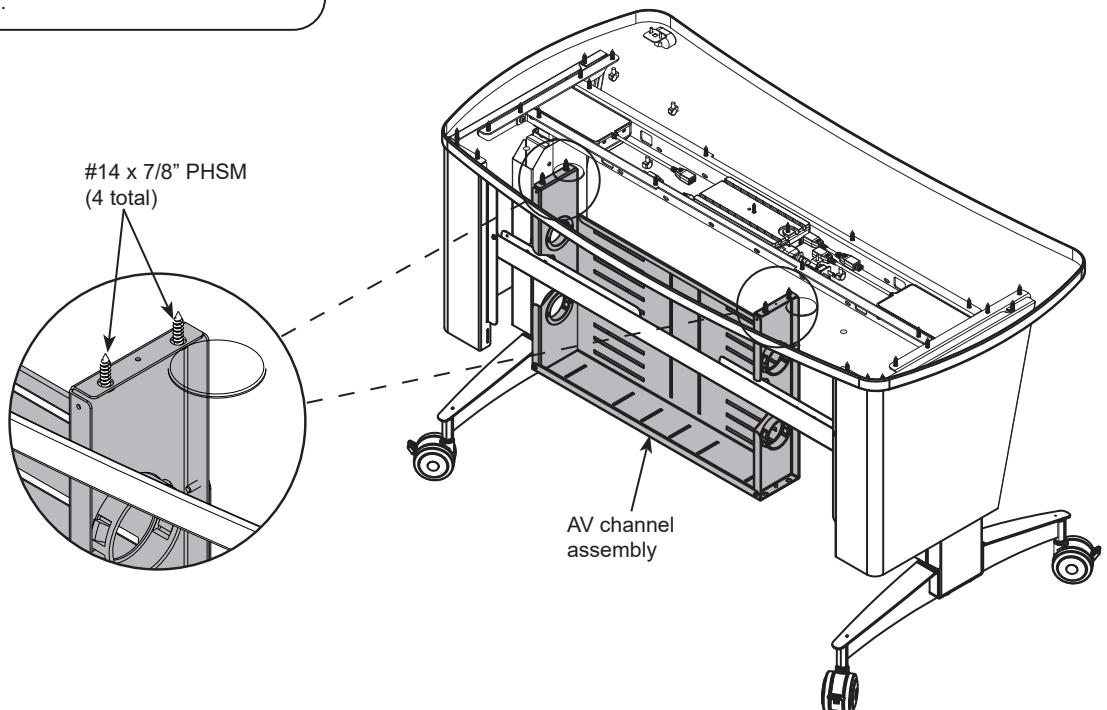


## 5 Install electronic equipment

Note: Mounting slots in the undermount AV channel are designed to provide multiple mounting options for AV over IP decoders or other light AV electronics.

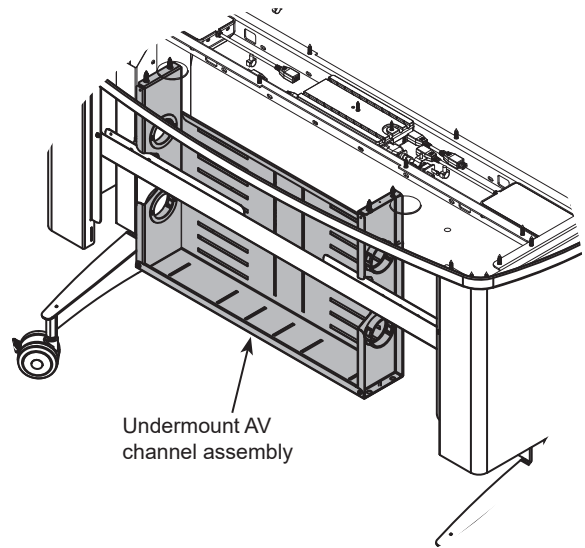

## 6 Re-install modesty panel

Tabs go into worksurface slots first

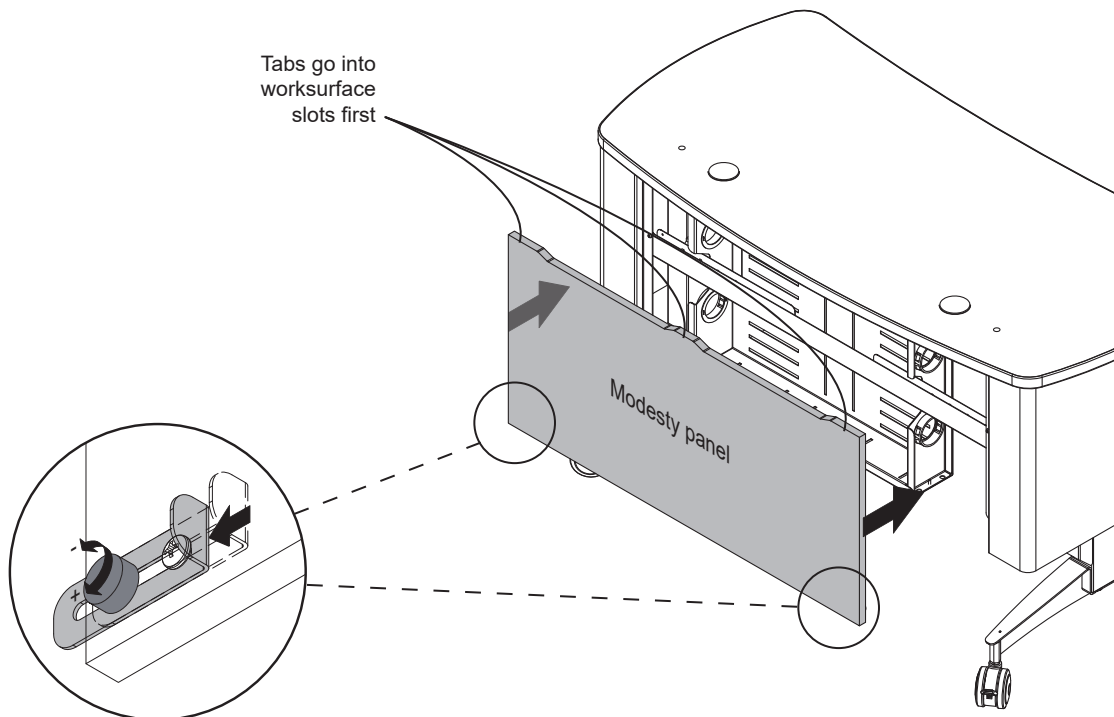

**X 2**