

Assembly Instructions


⚠ Important ⚠

Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included.

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

www.spectrumfurniture.com
800-235-1262, 715-723-6750

Thank you for purchasing Spectrum products!

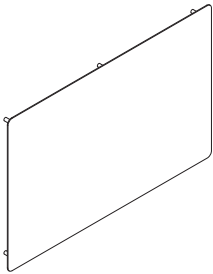


(1) 0120202
Logo Panel



(6) 026059
1/4" Flat washer



(6) 0104260
10-32 Keps nut

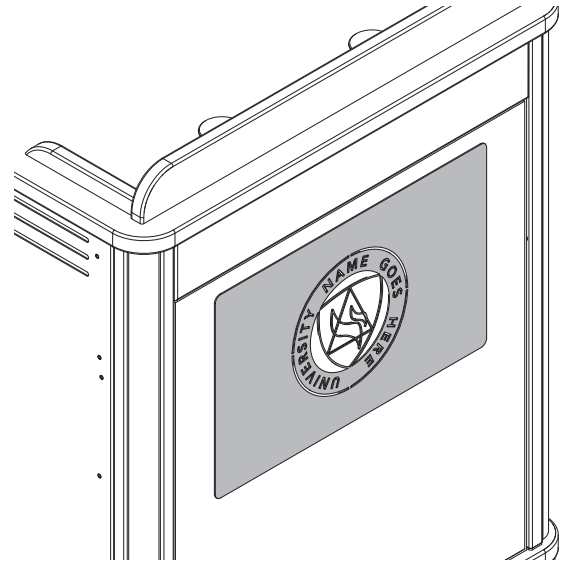

Customized Logo Panel for MM Series Link and Compact Lecterns 55111

Installation

1. Locate and flip-up the audience-side flip-up panel. **Figure 1A.**
2. Unlock the two panel locks.
3. Carefully lift out the audience-side panel. **Figure 1B.**

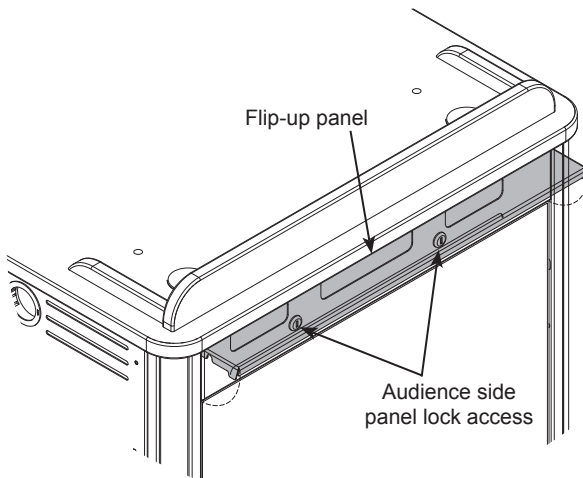
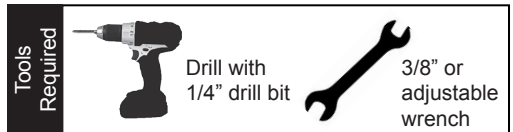


Figure 1A

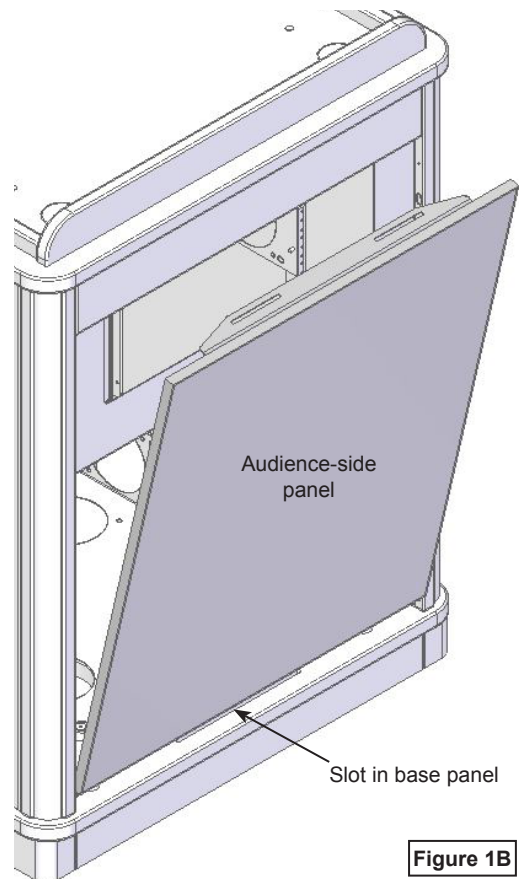



Figure 1B

4. Locate the (6) starter holes in the back of the audience-side panel. **Figure 1C.**
5. Using a 1/4" drill bit, slowly drill completely through the panel at the 6 hole locations.
6. Align the logo panel studs with the drilled holes and secure with (6) 1/4" flat washers and (6) 10-32 Keps nuts. **Figure 1D.**
7. To re-install the audience-side panel, insert the panel tab into the slot in the base panel, then tip the panel back into position, and re-lock the locks.



Use a sharp 1/4" drill bit to drill out the (4) existing starter holes. Drill slowly to minimize laminate chip-out around the holes. Placing masking tape on the laminate-side of the panel at the hole locations before drilling will also help minimize chip-out.

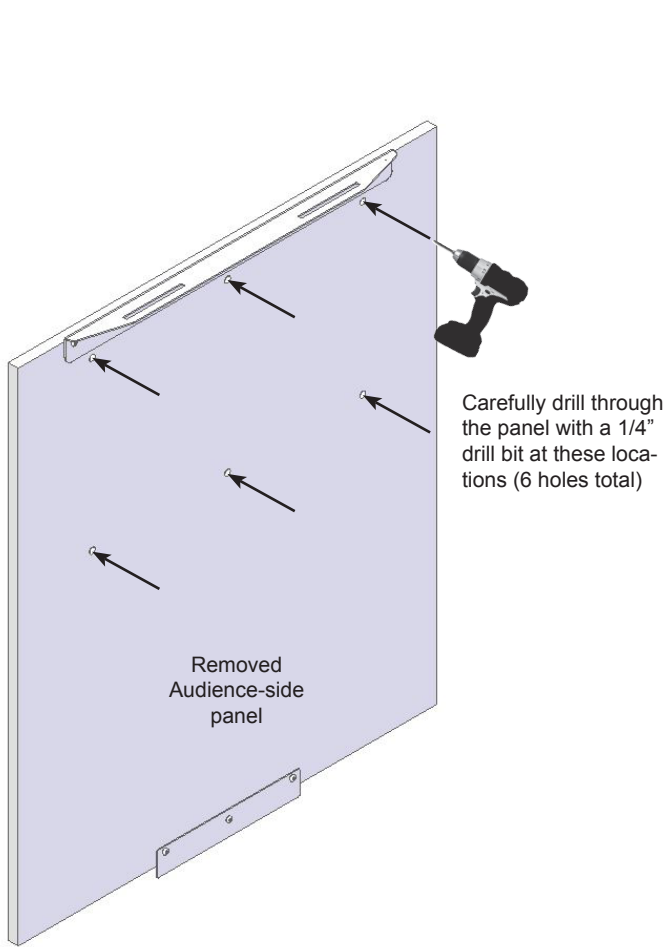


Figure 1C

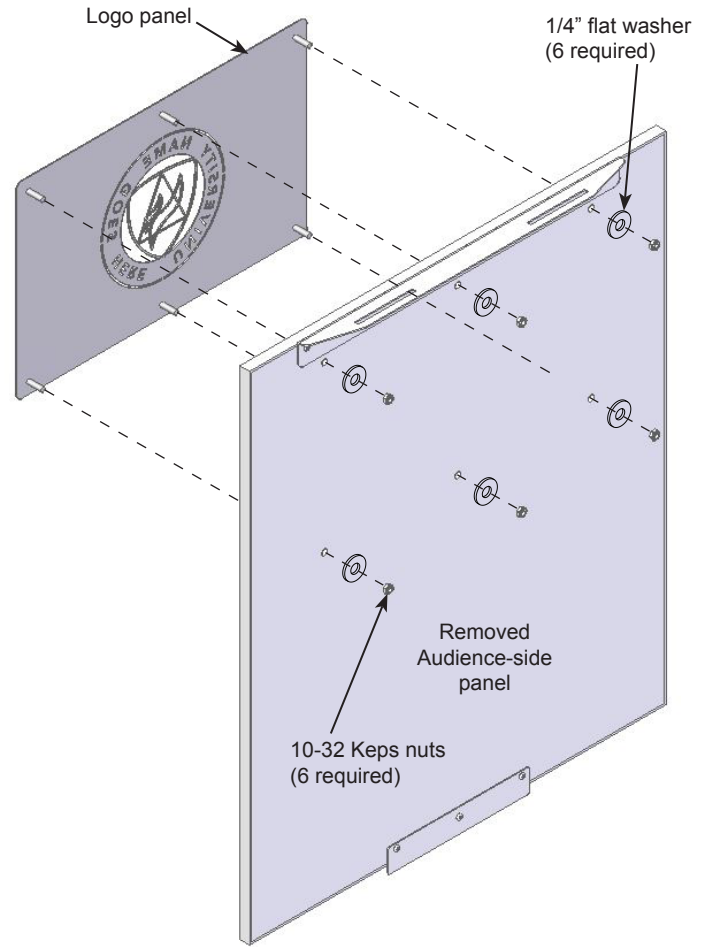


Figure 1D