Assembly Instructions

🛕 Important 🛕

Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included.

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

> www.spectrumfurniture.com 800-235-1262, 715-723-6750

Thank you for purchasing Spectrum products!



(1) 0109820 Flip-up shelf



(1) 039622 2" Grommet



(2) 056886 Folding shelf bracket




(4) 0100167 8-32 x 1/2" PH Thread-cutting screw



(2) 0109646 Shelf shim



(8) 042749 #8 x 1" PHSM

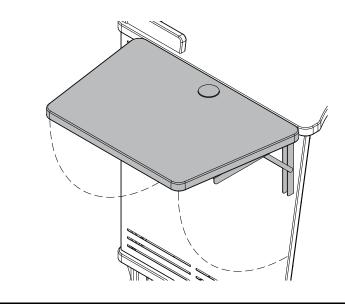

Flip-up Shelf 55402

1. Attach folding shelf brackets to lectern

- 1. Determine which side of the lectern the shelf is to be installed. (Left or right-side.)
- 2. Extend and lock the folding shelf brackets into the horizontal position. Figure 1.
- Align and attach each bracket to the side of the lectern with (2) 8-32 x 1/2" PH thread-cutting screws. Do not tighten these screws completely yet.




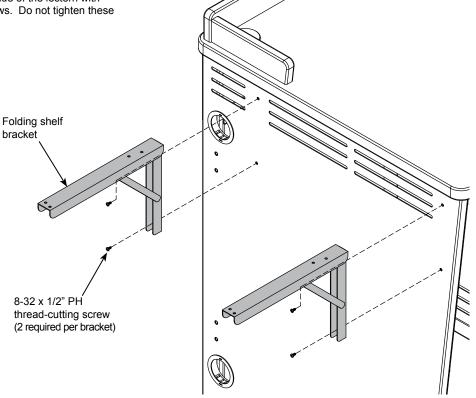




Figure 1

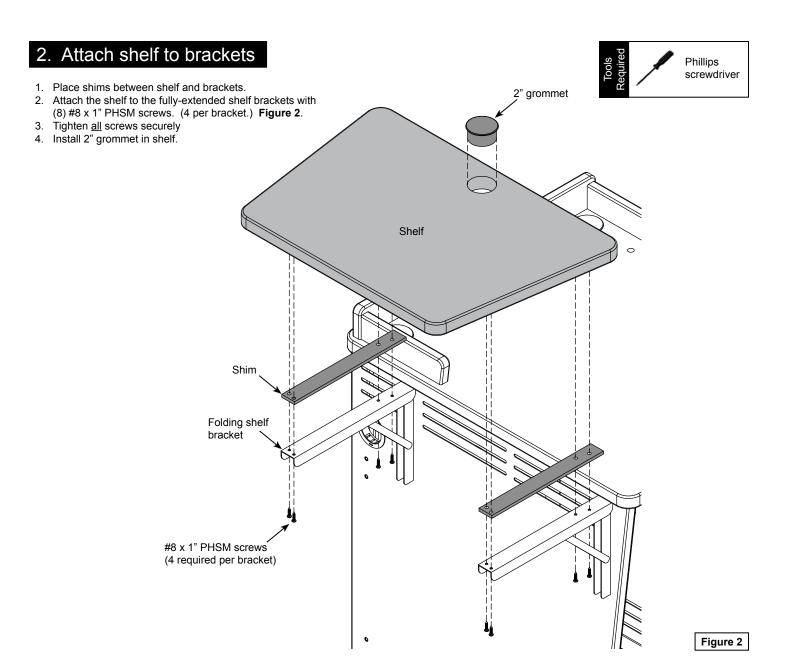

3. Operation

The shelf will automatically lock into place when lifted into the horizontal position with the levers released. **Figure 3**. To lower or flip-up the shelf, press and hold the levers under each folding shelf bracket at the same time while slowly lowering or raising the shelf. Do not exceed a maximum of 35 lbs of weight on the shelf. Do not move the lectern while the shelf is in the horizontal position.

Note: Power and communication wiring for document cameras, laptop computers, and / or projectors placed on the flip-up shelf should be routed on top of the audience-side of the shelf. Use of the shelf grommet hole for wiring will result in pinching of the cords when the shelf is folded.



Keep clear of pinch points during shelf movement. Do not exceed 35 lbs [15.9 kg] of weight on shelf.

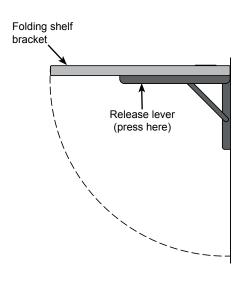


Figure 3