Assembly Instructions

Important



Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

www.spectrumfurniture.com 800-235-1262, 715-723-6750

Thank you for purchasing Spectrum products!





(1) 0175798 Shelf support



(8) 0100167 8-32 x 1/2" PH Thrd ctg screw



(2) 0193697 Folding bracket



(6) 026073 #8 x 3/4" PHSM



(1) 039622 2" Round grommet



(4) 052605 1/4-20 x 15mm JC bolts




(2)059984Snap-in grommet



(2) 026059 1/4" Flat steel washer



(1) 025039 4mm Hex wrench

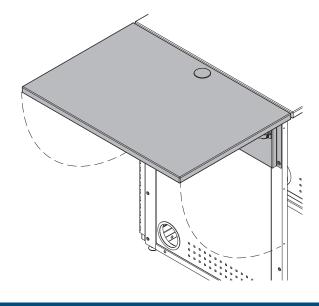

Flip-up shelf for Equipment Rack 68204







Assembly tip: Do not tighten component fasteners completely until all have been installed. Keeping them loose will help with alignment between parts during assembly.

1. Assemble shelf

1. Place shelf laminate side down onto a non-abrasive surface. Figure 1.


Align and attach the two folding brackets to the shelf with #8 x 3/4" PHSM screws (3 per bracket). The support on the folding bracket will need to be lifted up to install two of the screws. 3. Do not tighten screws completely.

4. Align and attach the two fully extended folding brackets to the shelf support with (4) 8-32 x 1/2" PH thread-ctg screws each.

Tighten all screws securely.

Install the (2) snap-in grommets into the shelf support.

Note: For stability reasons, Spectrum does not recommend attaching the shelf to a stand-alone equipment rack. Do not exceed 35 lbs of weight on the shelf. Not compatible with end-support legs.

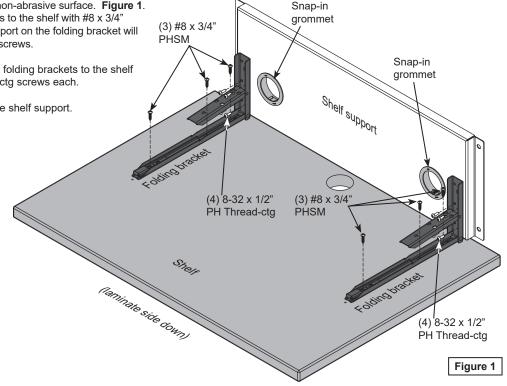

2. Attach shelf assembly to equipment rack

- Attach the shelf assembly to the equipment rack with (4) 1/4-20 x 15mm JC bolts. Figure 2.
- 2. Tighten screws securely.
- 3. Install 2" shelf grommet.

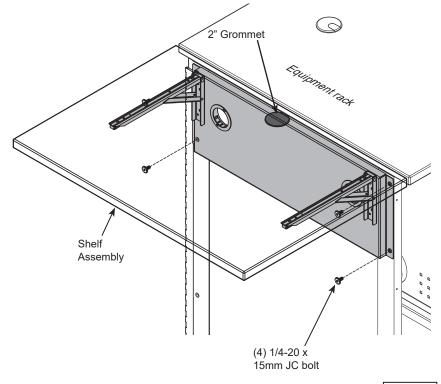


Figure 2

3. Operation

Operation

The shelf will automatically lock into place when lifted into the horizontal position with the levers released. **Figure 3**. To lower or flip-up the shelf, press and hold the shelf bracket levers while slowly lowering or raising the shelf.

Note: Power and communication wiring for document cameras, laptop computers, and / or projectors placed on the flip-up shelf should be routed on top of the audience-side of the shelf. Use of the shelf grommet hole for wiring will result in pinching of the cords when the shelf is folded.



Keep clear of pinch points during shelf movement. Do not exceed 35 lb [15.9 kg] of weight on shelf.

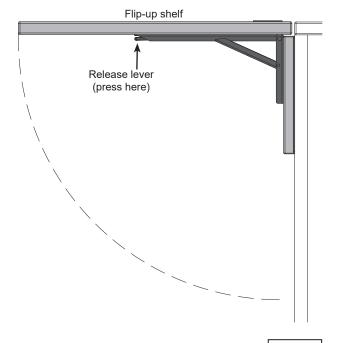


Figure 3