Assembly Instructions


Important A

Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included.

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

www.spectrumfurniture.com 800-235-1262, 715-723-6750

Thank you for purchasing Spectrum products!



(1) CPU Sling 0117848 - 24"D 0107801 - 30"D



(2) 0107595 Strap / buckle assembly (58")



(2) 0101382 #14 x 7/8" PHSM




(1) 0107804 Sling Bracket



(2) 035728 1/4-20 x 1/2 PHMS




(2) 041943 1/4-20 x 1/2" **PHMS**

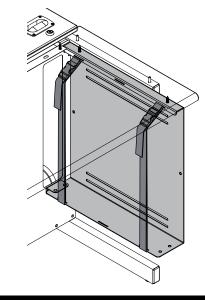

CPU Sling for Flex Insight Desk 24"D desks - 38981 30"D desks - 38980

Note: 1 sling is required on single desks, 2 on double desks



1. Remove Existing Cover Plate

- 1. Remove the (2) 1/4-20 x 1/2" PHM screws. Figure 1.
- 2. Remove cover plate.


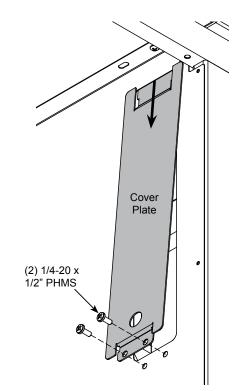


Figure 1

Install CPU Sling

- 1. Install the support bracket under the shroud opening as shown \mathbf{w} ith (2) 1/4-20 x 1/2" PHM screws from behind the shroud. Figure 2A.
- Align the support bracket holes and attach the sling to the worksurface with (2) #14 x 7/8" PHSM screws. Figure 2B.
- Install (2) 1/4-20 locknuts to secure the sling to the support bracket.

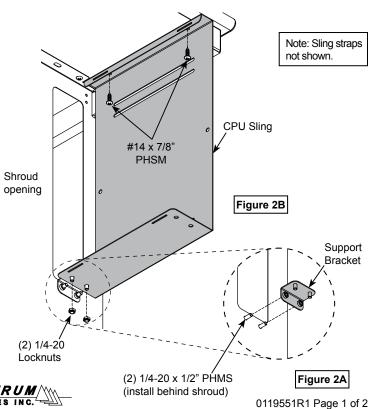

SPECTRUM/ INDUSTRIES INC.

3. Install CPU tower

- 1. Using the slots, install the straps onto the sling. Figure 3A.
- 2. Set the CPU tower into the sling.
- Make sure the CPU tower will be supported by both straps and tighten the straps while keeping the buckles positioned as high as possible to avoid interference. Figure 3B.

