Assembly Instructions



▲ Important ▲

Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included


Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

> www.spectrumfurniture.com 800-235-1262, 715-723-6750

Thank you for purchasing Spectrum products!



Assembly tip: Do not tighten component fasteners completely until all have been installed. Keeping them loose will help with alignment between parts during assembly.

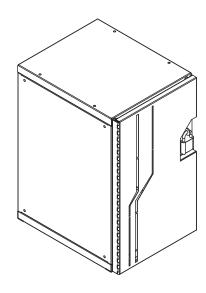

Esports Locker 37418




(1) 0172177 Top panel (labeled 'A')






(1) 0171994 Left side panel (labeled 'B')




(1) 0171994 Right side panel assembly (w/ hasp and magnet) (labeled 'B')



(1) 0171993 Rear Panel (labeled 'C')



(1) 0172173 Base (labeled 'D')



(1) 0172231 Door Assembly



(1) 0119448 Plastic storage



(2) 0160548 Corner Bracket



(1) 0190404 Re-programmable padlock



Parts Bag

(12) 035728 1/4-20 x 1/2" **PHMS**




(12) 0100167 8-32 x 1/2" PH Thrd ctg screw



(4) 0106543 1/4-20 Keps nut


Attach corner brackets to top panel


- Attach each corner bracket to the top panel (labeled 'A') as shown with (2) 8-32 x 1/2" PH Thrd ctg screws.
- Do not full tighten screws-they should be loose enough to allow some movement during assembly.

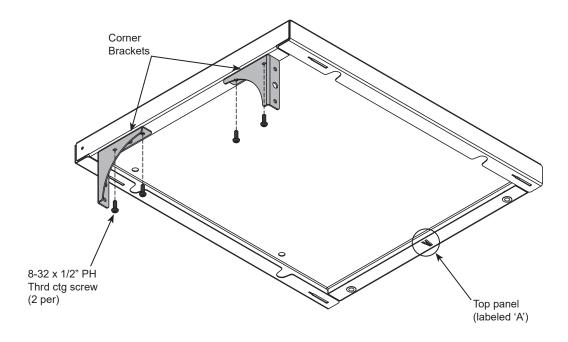

Attach side panels to rear panel


- 1. Place rear panel 'C' flange side-down as shown onto a flat surface.
- 2. Align the tabs of the back panel with the side panel slots.
- Pull / push the panels as shown to lock tabs into place. All three panels should be aligned at the bottom edge.

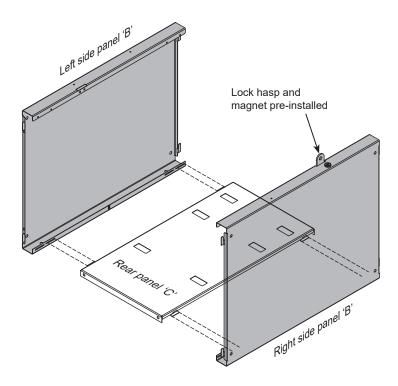


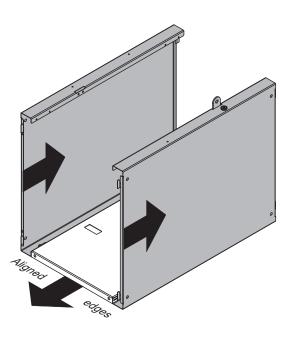

Attach top and base panels


- 1. Align the tabs of the side panels with the top and base panel slots.
- 2. Push the panels down to lock tabs into place. Make sure all panels are aligned. Install the remaining (2) 8-32 x 1/2" PH Thrd ctg screws in each
- corner bracket but do not tighten completely.

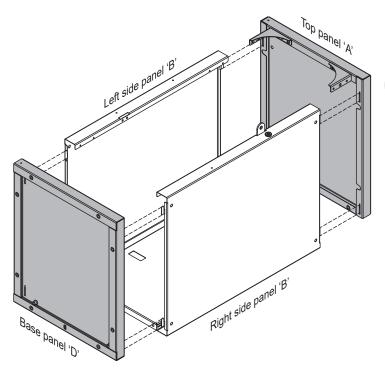

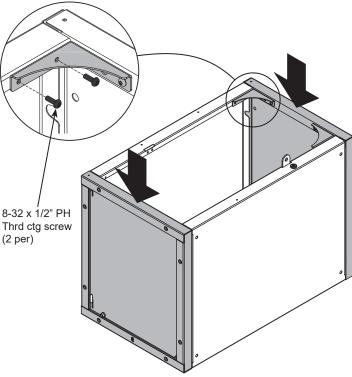


Secure panels


- 1. Carefully tip the locker assembly upright.
- 2. Install (4) 1/4-20 x 1/2" PHM screws at the rear panel to secure the assembly.
- 3. Securely tighten ALL screws at this point.

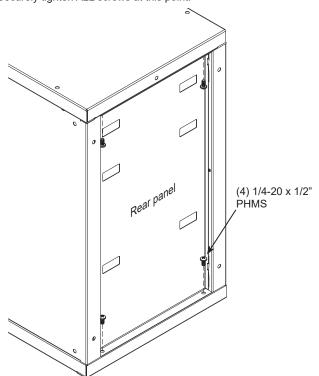


Attach door assembly

- 1. Open the hinge and attach the door assembly to the left panel edge with (4) 8-32 x 1/2" PH Thrd ctg screws.
- 2. Tighten screws securely.

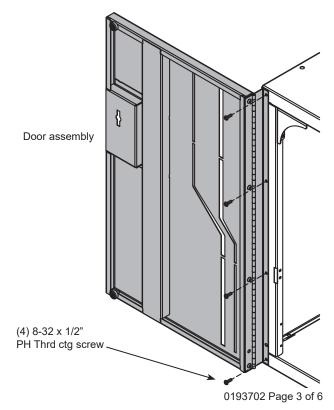

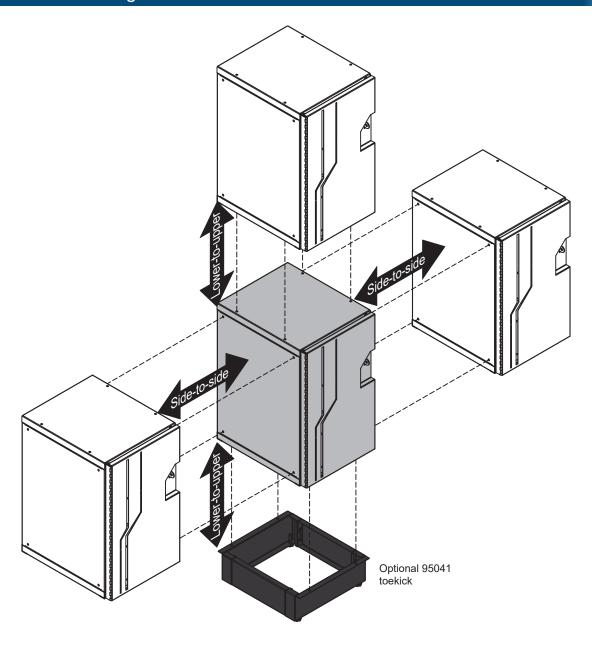


Fasteners for side-to-side connection

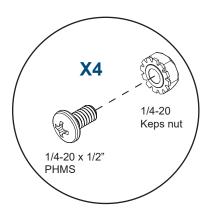


Fasteners for lower-to-upper connection



Stacking Guidelines

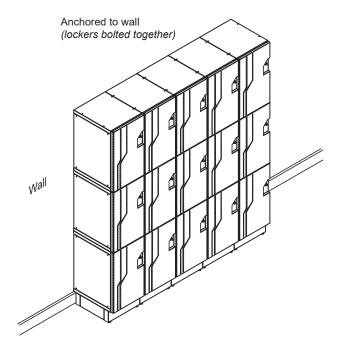

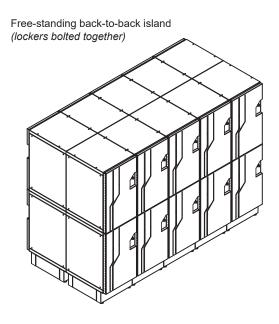


Optional toekick Stacked 2 high on optional toekick Single on optional toekick Single on optional toekick Optional Optional Optional Optional

toekick


toekick

Stacked 3 high on

toekick

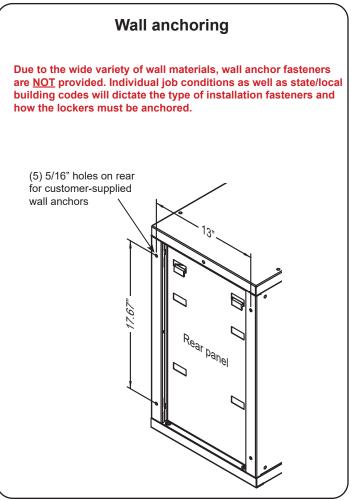


Accessories

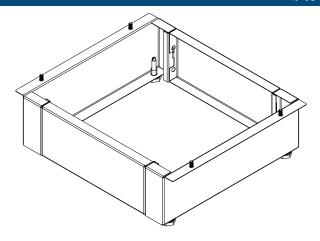

Toekick - 95041

- Raises single locker stack 5" off floor
- · 20-ga steel
- · Levelling glides adjust to uneven floors
- Dims: 14.5"W x 16.82"D x 4.9"H
- Black powdercoat
- Unit weight: 6lb [3.6 kg]
- Shipping weight: 7lb [4.1 kg]



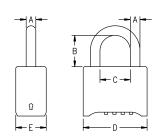

/	Α	.3125" [7.9 mm]
E	3	1" [25.4 mm]
	2	.983" [25 mm]
)	2.07" [52.5 mm]
E	E	.987" [25.1 mm]

Re-programmable 4-digit Combination Lock - 95536

- Set your own 4-digit personalized combination (up to 10,000 options)
- 5/16" hardened steel shackle for cut-resistance
- · Black powdercoated die-cast body for durability
- Change key included
- Unit weight: .55 lb [.25 kg]