Assembly Instructions

▲ Important ▲



Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included.

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

> www.spectrumfurniture.com 800-235-1262, 715-723-6750

Thank you for purchasing Spectrum products!




1. Assemble frame

thread cutting screw


1. Using the inner holes, attach (2) supports to the rack rail corners as shown with (4) 8-32 x 1/2"PH thread-cutting screws and tighten securely. Figure 1.

w/ 1/4" washer

2. Repeat on the second frame.

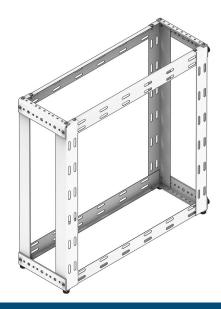

3RU Rack Cube for AV Credenza Slim 55517

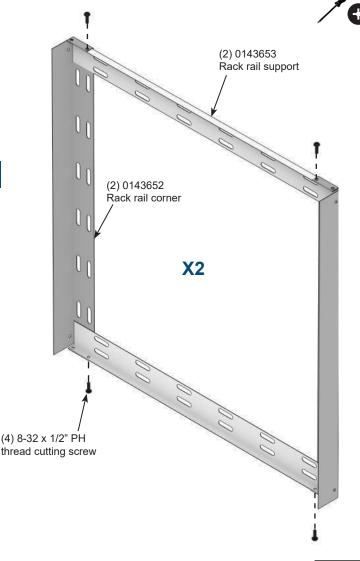

2. Attach rails


1. Attach (4) rack rails to the assembled frames using 8-32 x 1/2"PH thread-cutting screws. Do not tighten screws completely until all screws have been installed. Note (4) recessed bumpers will be

installed with the screws on the bottom and (4) on the side of the cube. 2. Tighten screws completely. Figure 2. Assembled frame 8-32 x 1/2" PH thread cutting screw (4) Rack rail 6.25" (8) Recessed bumper w/ 1/4" washer Assembled frame Figure 2

3. Install rack cube support into credenza

- 1. Open the side door.
- 2. Place the rack cube support inside the open bay.
- 3. Install (2) 8-32 x 1/2" PH thread-cutting screws to secure. Tighten screws securely. **Figure 3**.

Note: If your credenza has fixed rack rails installed-the rails and brackets will need to be removed before installing the rack cube support and rack cube.

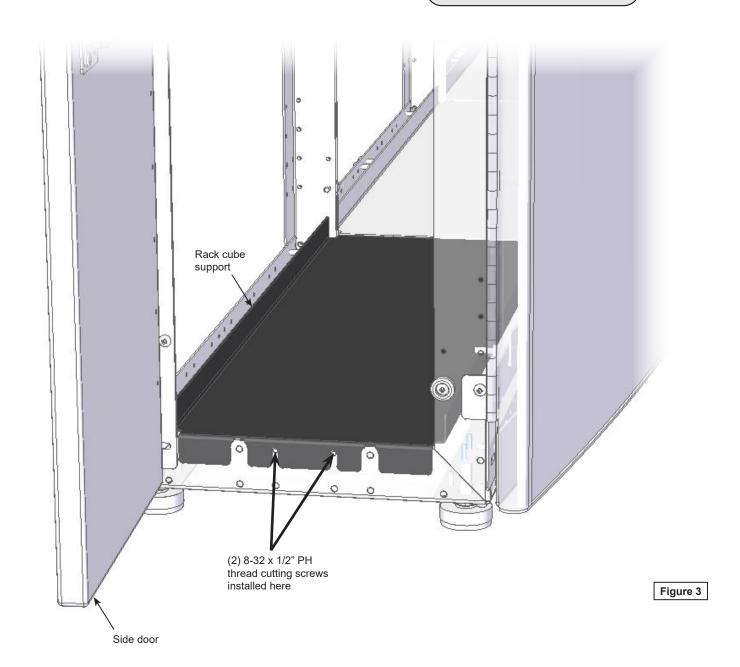

4. Install rack cube into credenza

- 1. Install rack equipment into rack cube.
- Set completed rack cube onto support.