

# Assembly Instructions


## ⚠ Important ⚠

Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included.





Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

**www.spectrumfurniture.com**  
800-235-1262, 715-723-6750


*Thank you for purchasing Spectrum products!*

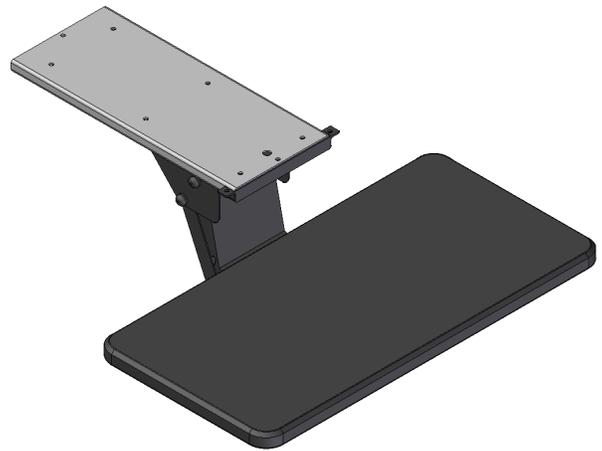

## Micro Arm Keyboard Tray 95506

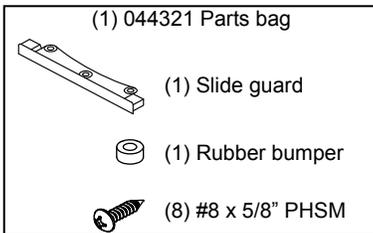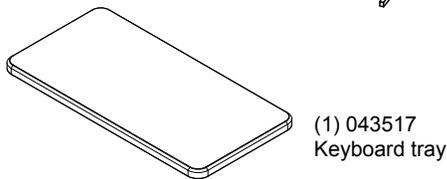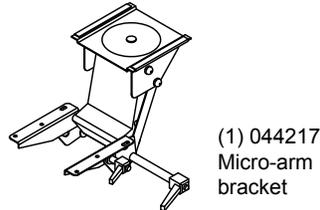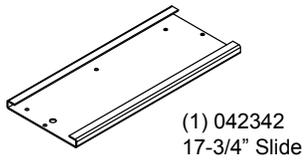


Note: The spacers and longer screws are used between the slide and worksurface only on worksurfaces with a 1" protruding support bar.

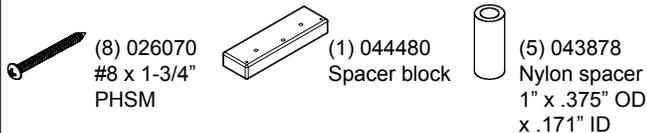

## 1. Attach micro-arm bracket to keyboard tray

1. Align the micro-arm bracket with the 6 pre-drilled holes in the center of the keyboard tray and attach with (6) #8 x 5/8" PHSM screws. **Figure 1.**
2. Tighten screws securely.

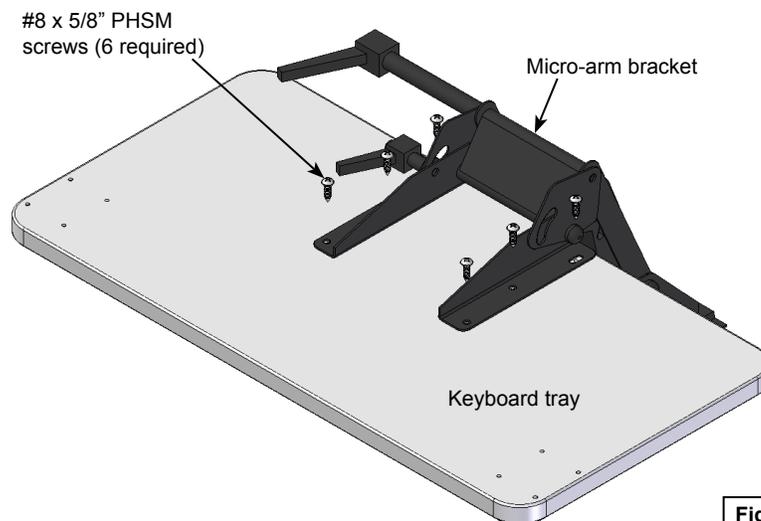

**Figure 1**

## 2. Attach slide to desk

1. Flip the worksurface / desk upside-down onto a non-abrasive surface.
2. Locate the slide perpendicular and about 1" from the edge of the worksurface. The slide should not be mounted closer than 8" to the nearest leg.

### Typical installation

3. Attach the slide using (8) #8 x 5/8" PHSM screws and tighten securely. **Figure 2A.**
4. Attach the rubber bumper toward the back of the slide using the middle hole.

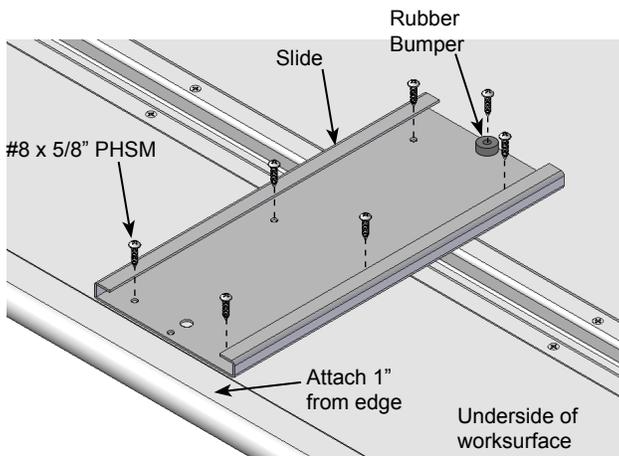


Figure 2A

### Installation on desks with support bar

Note: The nylon spacers and longer screws are used between the slide and worksurface only on worksurfaces with a protruding support bar.

3. Place the spacer block and (5) nylon spacers under the tray as shown **Figure 2B.**
4. Attach the slide, spacer block, and nylon spacers using (6) #8 x 1-3/4" PHSM screws and tighten securely.
5. Attach the rubber bumper toward the back of the slide using the middle hole.

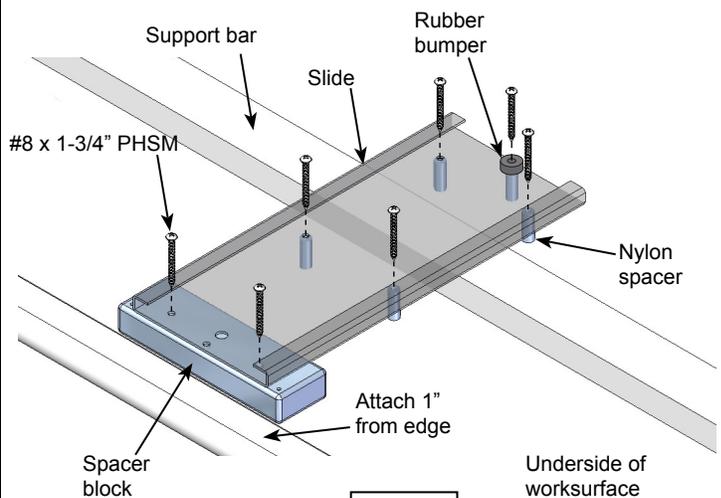


Figure 2B

## 3. Attach slide guard

1. Flip the desk right-side up.
2. Slide the keyboard assembly into the slide. **Figure 3A.**
3. Using (2) #8 x 5/8" PHSM screws, attach the slide guard to the front of the slide. **Figure 3B.**

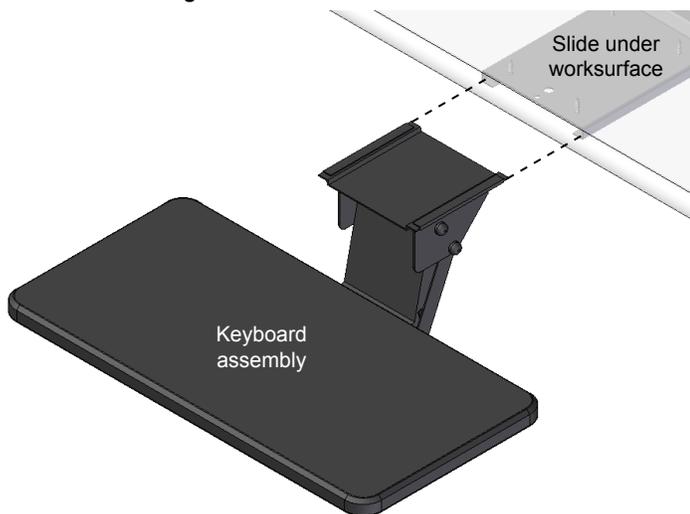


Figure 3A

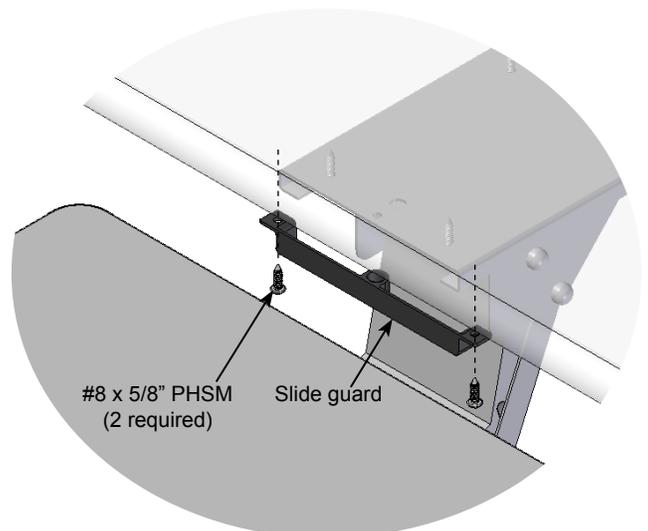


Figure 3B