Assembly Instructions

⚠ Important ⚠


Before you begin, read and comply with all safety and operating instructions, and ensure all parts and correct quantities are included.

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

www.spectrumfurniture.com

800-235-1262. 715-723-6750

Thank you for purchasing Spectrum products!







(1) 0190421 Keeper #1



Installation

- 1. Place two tables next to each other.
- 2. Open the latch and attach to table #1 with (2) #8 x 3/4" PHSM screws. Figure 1.
- 3. Attach keeper #1 to table #1 with (2) #8 x 3/4" PHSM screws.
- Attach keeper #2 to table #2 with (2) #8 x 3/4" PHSM screws.
- Tighten screws securely.
- Close and lock latch to secure tables together. Figure 2.

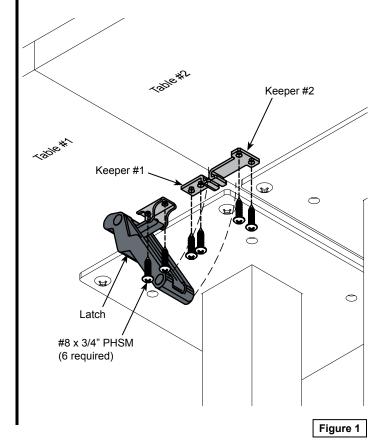

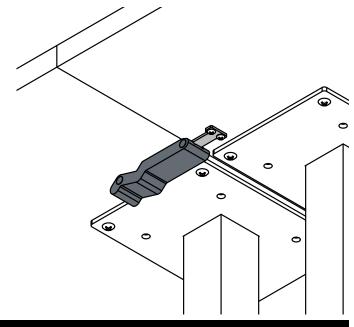

Ganging Latch for Flex Active Table 37238



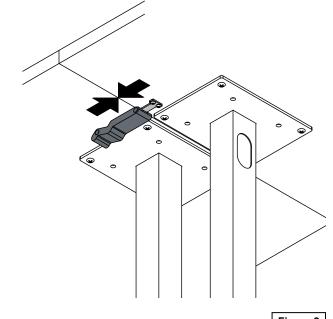


Figure 2